



# **Assembly Instructions**


---

**MODEL 2370**  
**FLAT BED PLASTIC MULCH LAYER**


---

# STEP 1



## Unpackage & Count Parts/Assemblies

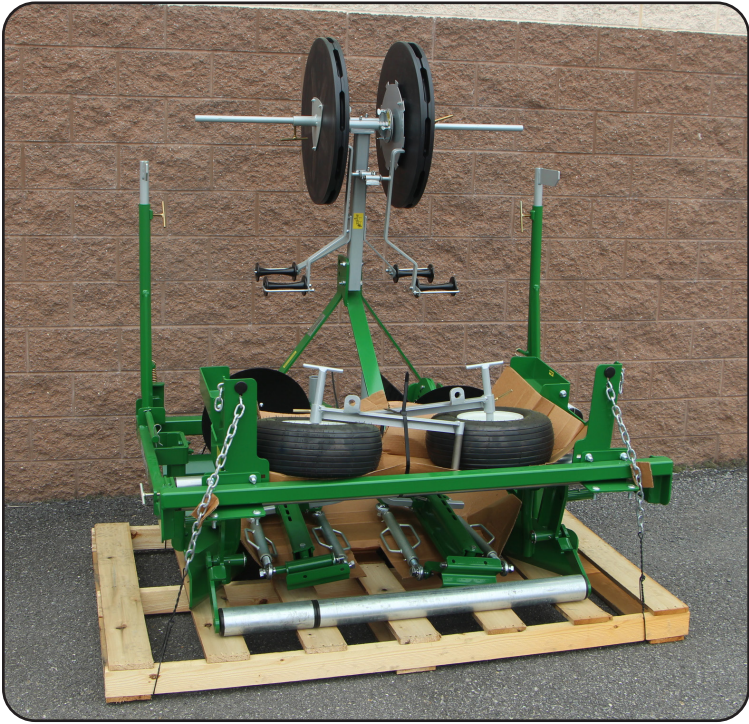

### Standard Parts Shipped with Equipment:

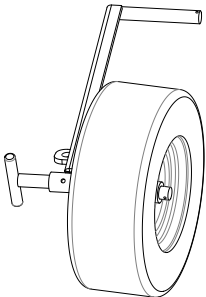

**Press Wheel Set**

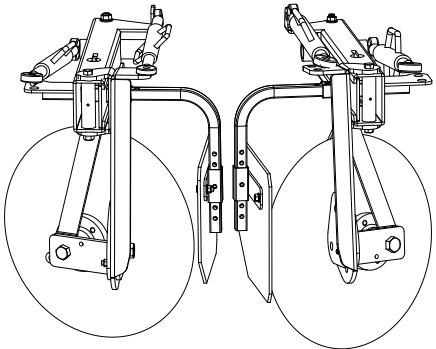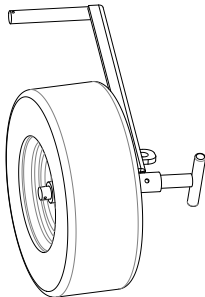


**Cover Disk w/ Dirt Shield Set**


# STEP 2

## PRESS WHEELS


*See Operating Manual for adjustments.*

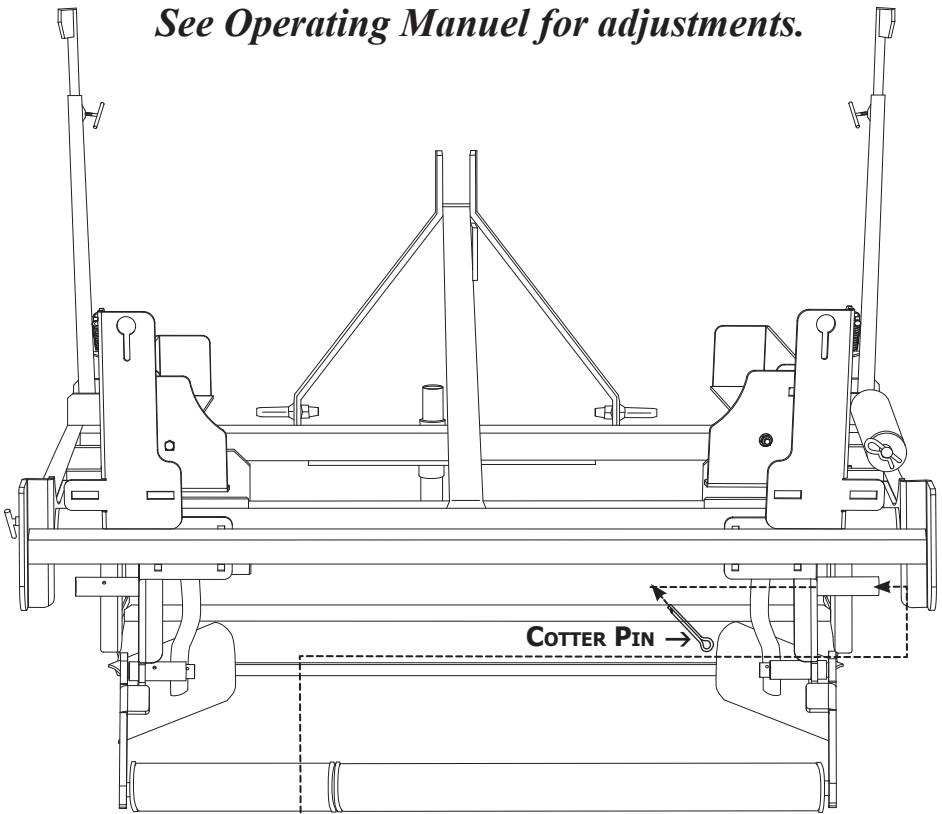

Remove cotter pin from hole on press wheel and slide through bracket as illustrated. Fasten in place again with cotter pin.

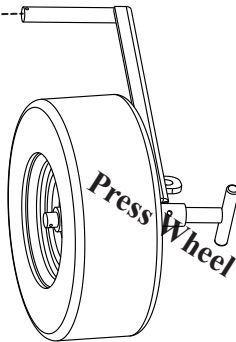


2

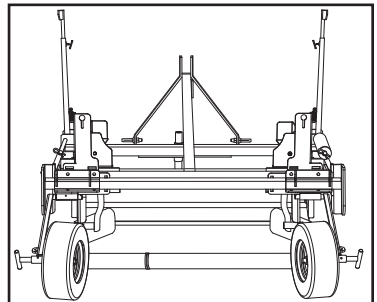


# STEP 3

## REAR COVER DISKS


*See Operating Manual for adjustments.*

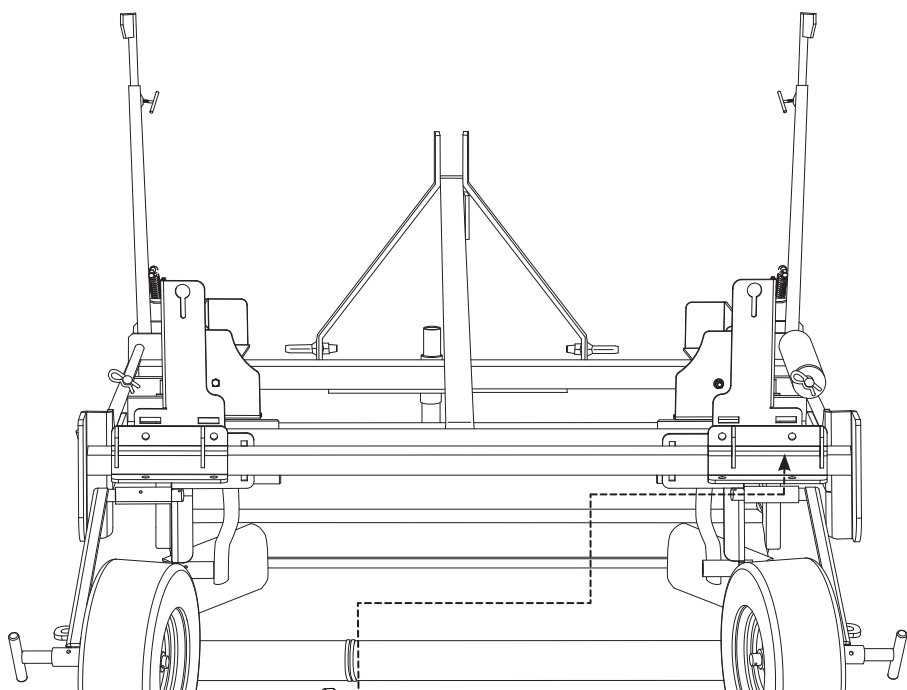

Install disk arm assembly as shown by mounting in the bracket and fastening in place with pre-installed bolt and nut.

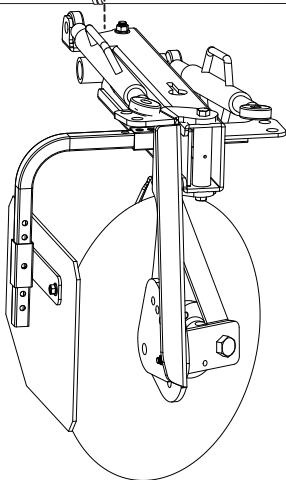


3

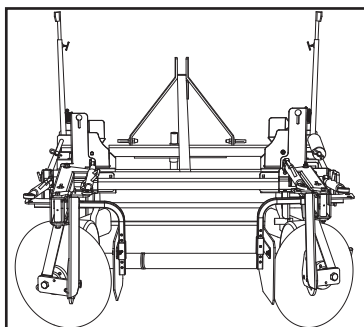

# STEP 4

## TRACTOR HOOK-UP


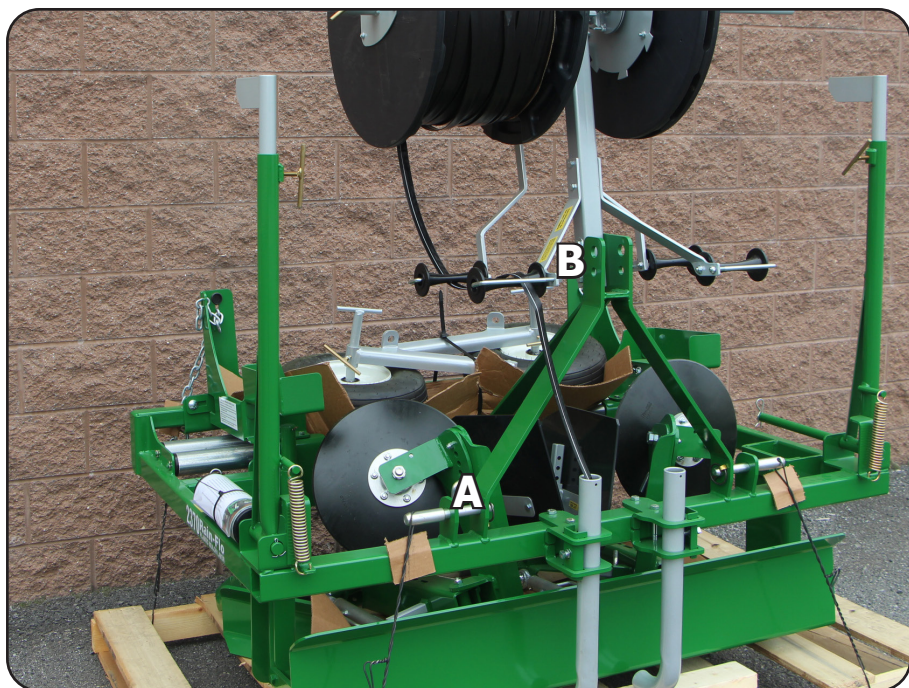


The Model 2370 has Category I and II lift pins(**A**) on a 3-point hitch. Hook up 3-point top link to top of A-frame(**B**) and adjust top link to level machine.

# STEP 5

## INSTALLING DRIP TAPE ROLL

*See Operating Manual for Adjustment*

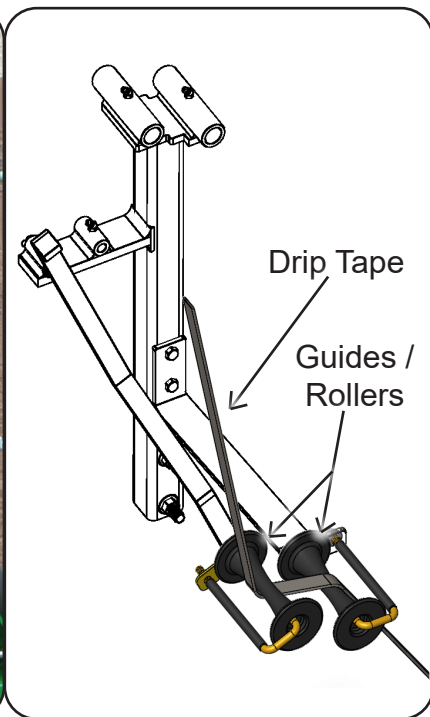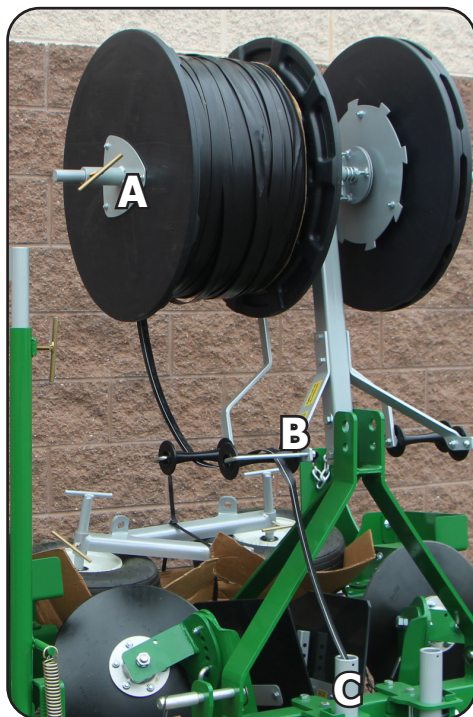

**Drip Tape:** Remove plate with locking clamp(A). Slide drip roll onto rod, press plate(A) tight against roll and tighten tee-handle on clamp. Feed drip tape through swing arm guide and stationary guide(B) (See sketch) then into down pipe(C).

**Note;** Turn drip emitters up toward plastic for less clogging, and make sure drip roll is compressed firmly between plates, for positive braking effect.




# STEP 6

## INSTALLING PLASTIC ROLLS

*See Operating Manuel For Adjustment*

Adjust roll holders(**A**) to your plastic roll widths (see Operating Manuel) and lay plastic rolls on top of rollers(**B**). Pull plastic end down between the two rollers and underneath the bottom roller(**C**). Secure plastic and drip tape at end of row. Only feed from one plastic roll at a time.

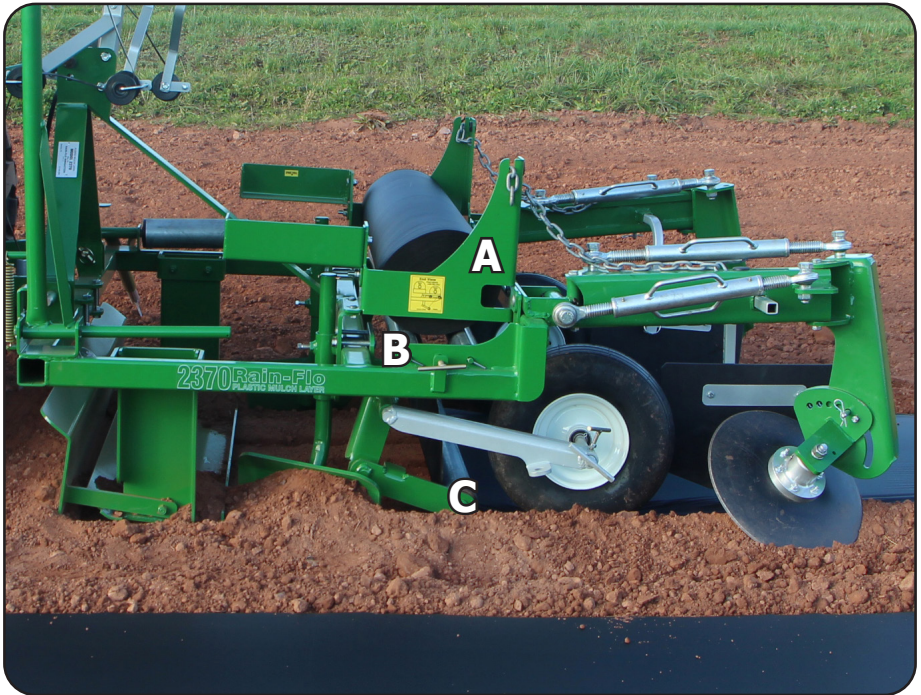

~2021 Edition~



Rain-Flo Irrigation  
(717) 445-3000